

Spirale Vs




Control and supervision software

Fast, reliable and user-friendly:
the monitoring solution for your test benches

A customized graphical user interface for a powerful supervisor developed through our years of experience in climatic and environmental simulation.

Advantages

- HMI customized for your project : synoptic of the equipment, displayed parameters, etc.
- Control via integrated touch-screen and/or remote PC
- Equipment parameters real-time display
- Manual and automatic modes, with pre-programmed cycles
- Maintenance facilitated : service interventions schedule, preventive maintenance , autotest possible
- ProgWin test cycles editor and VisuWin test post-processing software integrated

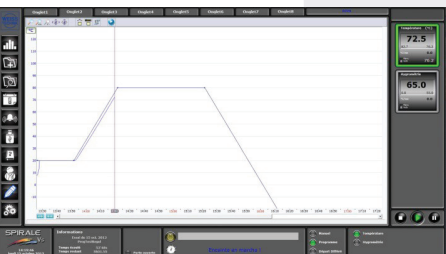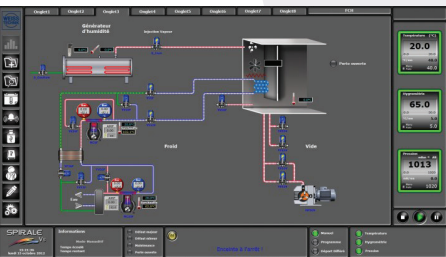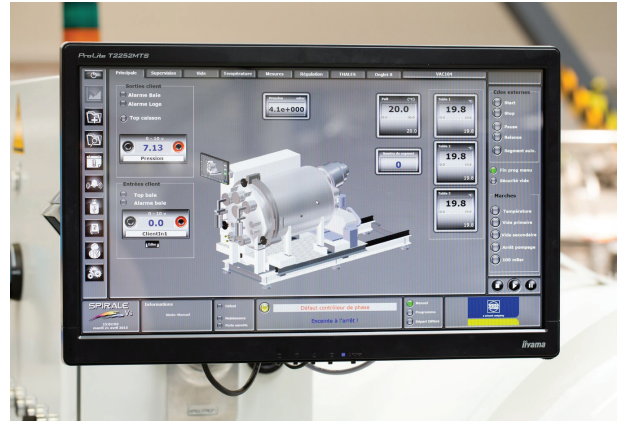

Main features

- **Spirale Vs carries out all necessary automation** to reproduce required environmental conditions and ensure both users and DUT safety
- Test cycles programming
- Safety monitoring, alarms threshold programming
- Timer function : programming of the starting or ending hour/date of test cycle
- Cycle monitoring and recording : the test results (manual or programmed) can be accessed, modified, reviewed, printed. At the end of the test the recording file is archived.
- Test cycles post-process : VisuWin integrated software allows post-process on recorded test files and edition of test reports
- Common banner display with control information, icons and access to menus.
- Specimen control via dry contacts
- Access to « user » script

Weiss Technik North America, Inc.

3881 N. Greenbrooke Dr. SE
Grand Rapids, MI 49512 USA
(616) 554-5020 • Fax: (616) 554-5021
www.weiss-na.com
24/7 Service Support Helpline: 1-800-361-6731
Global Partner for Environmental Test Chambers